

Incline™ Accessory Kit (AC710) for Kinesis® Freestyle™ Convertible Keyboard

Online User's Manual and instructional videos. This mini-manual will get you started, but if you have questions that aren't answered here, download the full User's Manual and view the instructional videos at <http://www.kinesis.com/support/manuals.htm>.

Introduction

The Freestyle Incline Accessory kit adds a 10-degree fixed tenting angle and integrated palm rests to the Freestyle Solo convertible keyboard, creating the Freestyle Incline keyboard.

The Freestyle Incline keyboard provides flexible splay adjustments with one-piece convenience. The 10 degree lateral slope (tenting) angle relaxes forearm muscles, and when combined with the integrated, padded palm rests, contributes to relaxed neck and shoulder muscles. The adjustable front opening (splay) minimizes adaptation time and provides the best fit for all body shapes and sizes.



Contents of kit

The Freestyle Incline Accessory Kit includes a sturdy base on which the Freestyle keying modules are mounted with 10-degrees of tenting and adjustable splay. Also included are palm rests and replaceable, self-adhesive palm pads.

Removing Pivot Tether™

The Pivot Tether, which comes installed on the Freestyle Solo™ keyboard, must be removed before installing keyboard to the Incline base. Place the keyboard on a flat surface, slide the release button on the top rear of a keying module. Pull that keying module up to release it from the pivot tether. Don't worry if moderate force is required—it won't break!

Slide release button

Pivot Tether




If you wish to remove the pivot tether completely, slide the other release button and wiggle the Pivot Tether while pulling it away from the keying module.

Installing palm rests (install first, before installing keyboard on base)

Be sure you install each palm rest on the correct keying module, with the wider end of the support area towards the middle of the keyboard. Lay the keyboard on a flat surface and place palm rests in front of the appropriate keying module. Slide each palm rest towards its keying module to engage the three mounting tabs in their respective slots.


To remove the palm rests, hold a keying module in one hand and its palm rest in the other hand. Pull the palm rest straight away from the keying module. For easier removal, lift up **gently** on the palm rest while pulling it away from the keyboard. *Note: Don't remove one corner before the other—pull the palm rest straight away from the keyboard.*

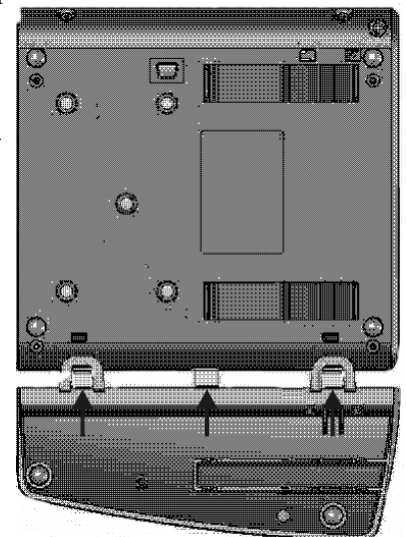

Installing Freestyle keyboard to base (install palm rests first)

(1) With the Incline base module face up on a flat surface, position each keying module (with palm rests installed and pivot tether removed) in its approximate position on the base. Then lower each keying module onto its respective pivot pin (see drawing, right), engaging the large round hole in the middle-rear corner of the keying module. The button will snap as the keyboard locks onto the pin.

(2) When both keying modules are locked onto their pivot pins, grip each module at the front, holding them to the Incline base, then flip the entire unit upside down to expose the underside. It may be easiest to do this in your lap.

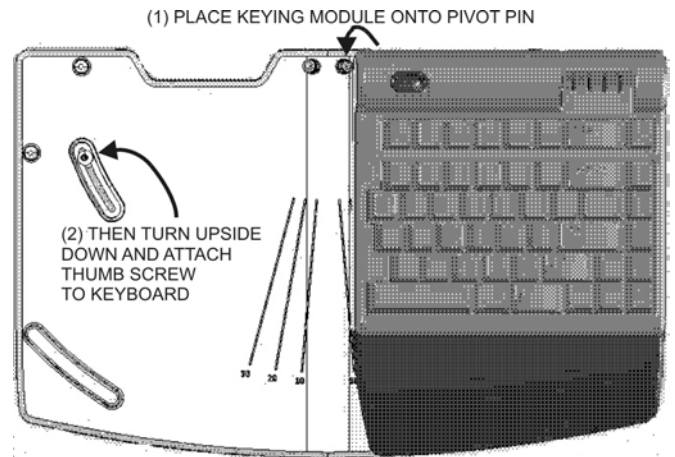

While holding a keying module up to the base, slide the thumb screw until it lines up with the threaded insert on the underside of the keying module. Gently start the thumb screw into the insert, turning clockwise, then tighten gently. Repeat this process for the other keying module. Then flip the keyboard right-side up. You may tighten or loosen the thumb screws in order to lock or adjust the splay of the keying modules.

Trouble shooting and Technical Support

For support, first download the complete Users Manual from the Kinesis website (<http://www.kinesis.com/support/manuals.htm>). If you still have questions or problems, email Kinesis Technical Support (tech@kinesis.com), or call during business hours (M-F, 8:00AM to 4:30PM Pacific Time).

Health Caution

Improper keyboard and/or mouse use may contribute to painful and permanent injuries. Read the Health and Safety details in the full User's Manual and on the bottom label of the keyboard. If you experience pain, weakness, numbness, or tingling while or after using your computer, consult a qualified health professional for advice.

Warranty

Kinesis warrants this Freestyle keyboard accessory is free from defects in materials and workmanship and will perform substantially in accordance with the Product documentation for two years from the date of purchase. If Product fails due to accident, abuse, inappropriate use or normal wear, Kinesis shall have no responsibility under this Limited Warranty. For complete warranty details, see the full Users Manual online at <http://www.kinesis.com/support/manuals.htm>.

Kinesis is a registered trademark and Freestyle, Incline, and Pivot Tether are trademarks of Kinesis Corporation. Patents are pending worldwide.



www.kinesis.com

sales@kinesis.com

Phone: 800-454-6374 (USA only) or 425-402-8100